





## TASER® Cartridge Cover Removal

Before removing the cover, make sure the front of the cartridge does not point at any body part or at anyone.


M & X Series TASER Cartridges:

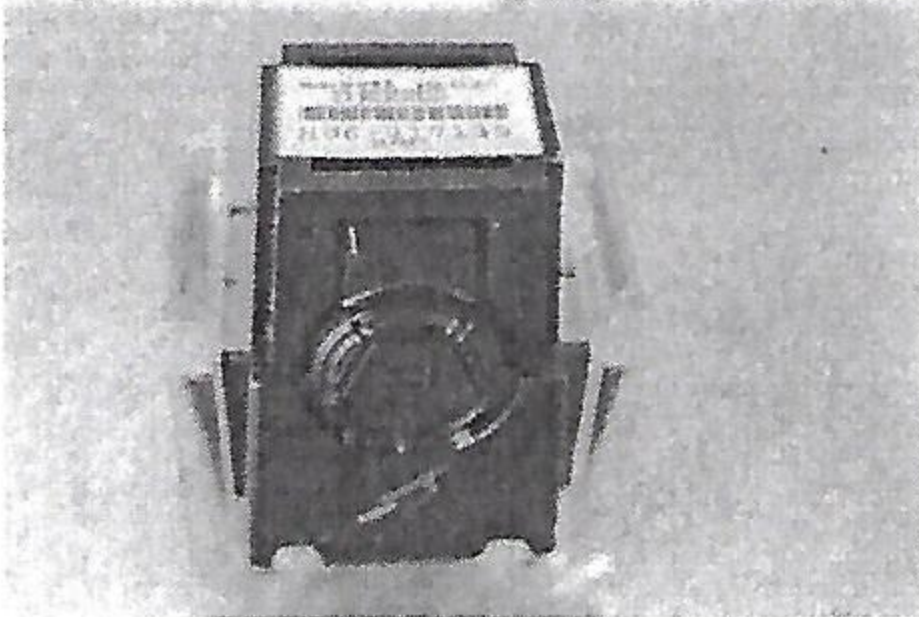


Step 1: Place the cartridge with the cover face down (blast doors down) onto a stable/solid surface, e.g., a table

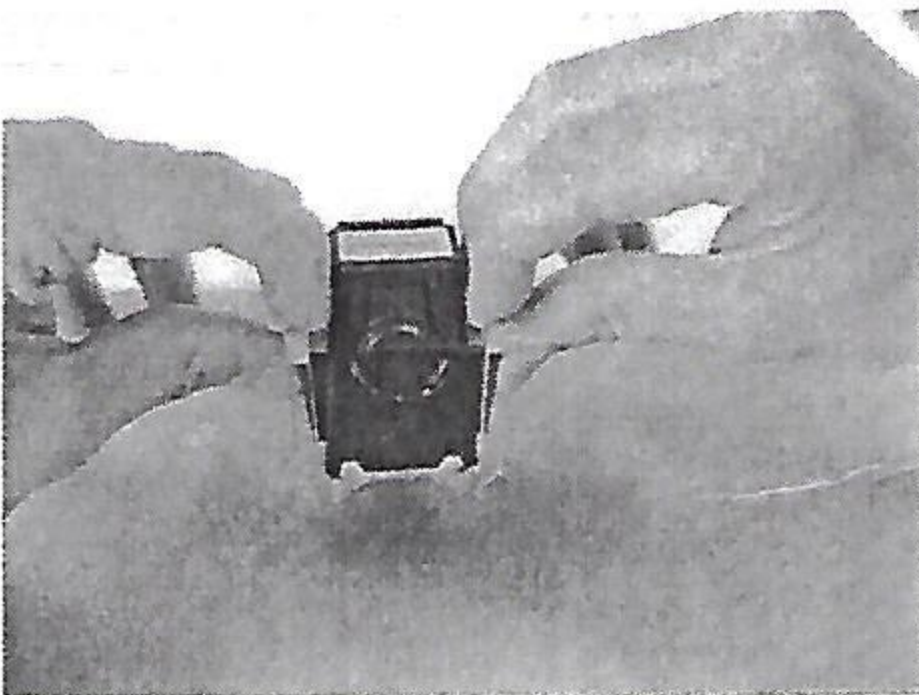

Step 2: Place your thumbs onto the sides of the cartridge where the wedges/electrodes are located and place your index and middle fingers onto the locking portions of the cover.

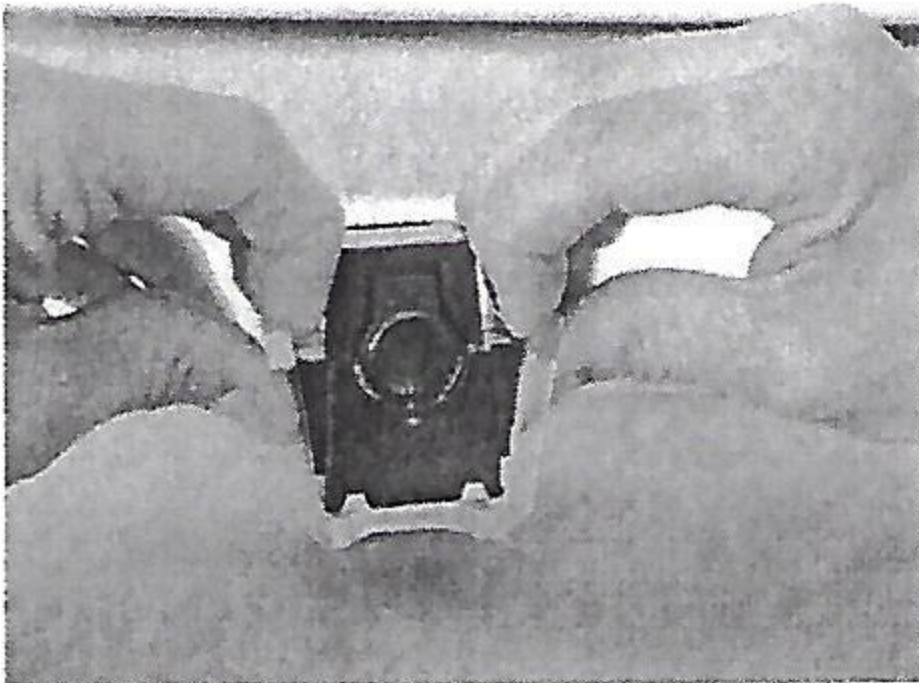

Step 3: Push in with your thumbs and pull outward with your fingers. The cartridge will pop upward, releasing it from the cover.

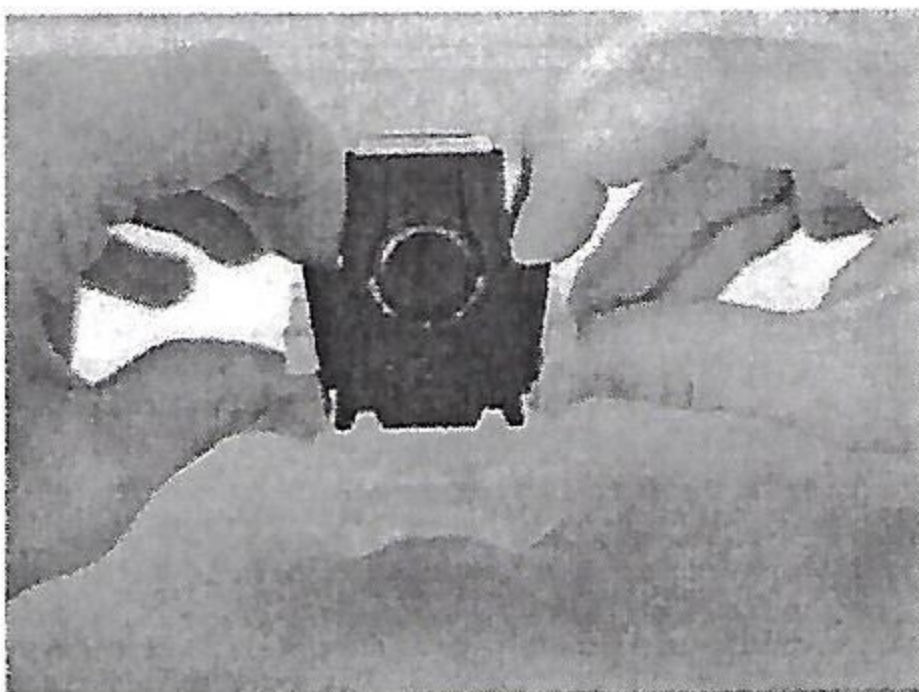

Note: The cartridge may pop upward quickly when the pressure is released from the locking portions of the cover.